

IRIS516

Compact Marine PTZ Controller

User Guide

Contents:

Page

- 3 Warnings and Regulatory Information
- 4 Introduction
- 5 Installation Instructions

Operation:

- 7 Power and Data Connections
- 8 Main Menu
- 9 Camera Select Menu
- 10 Function Select Menu
- 11 Lens Function Select Menu
- 12 Day/Night Function Menu
- 13 Scan Functions Menu

Thermal Functions:

- 14 Thermal Colour Palette Selection
- 15 Thermal Scene Mode Selection

Settings:

- 16 Main Settings Menu
 - 17 Image Flip Menu
 - 18 Preset Save Menu
 - 19 Set Camera Type Menu
-
- 20 Notes
 - 21 Back Cover

Warnings & Regulatory Information

Do not use harsh chemicals or cleaning solvents to clean the device.

Do not attempt to open the device.

Unauthorized modifications or attachments could damage the device and may violate regulations governing radio devices.

Avoid dropping, knocking or shaking the device. Rough handling can break internal circuit boards and fine mechanics.

Observe correct polarity when connecting power and data. Failure to do so could result in damage to the unit.

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or its packaging indicates that it must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling please contact your local city office, your household waste disposal service or the shop where you purchased the product.



This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorientate or relocate the receiving antenna; Increase the separation between the equipment and the receiver, connect the equipment to an outlet on a different circuit from that to which the receiver is connected; consult the dealer or an experienced radio / TV technician for help.



We hereby declare that the product is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (Radio and telecommunications terminal equipment Directive).

Introduction

The IRIS516 Marine PTZ Controller is an intuitive multiple camera control device designed specifically to control Iris Innovations range of Pan Tilt Zoom (PTZ) and Thermal Imaging PTZ cameras.

Featuring an ultra-compact waterproof (IP66) design and ruggedized miniature 2 axis joystick, the IRIS516 is a simple to use controller, enabling access to all of the extended camera features in the Iris PTZ product range.

Set-up and call User Preset Memory positions, select camera scans and tours, choose colour palettes and scene modes and much more, all from the intuitive structured menu interface.


Using RS485 Serial Data communications, the 516 can be installed and operated together along with other Iris PTZ control devices, to control multiple cameras, including support for Pelco-D standard cameras along with all the advanced and extended functionality of the Iris PTZ product range.



Installation Instructions



The IRIS516 is designed to be panel mounted into a suitable dashboard or helm.

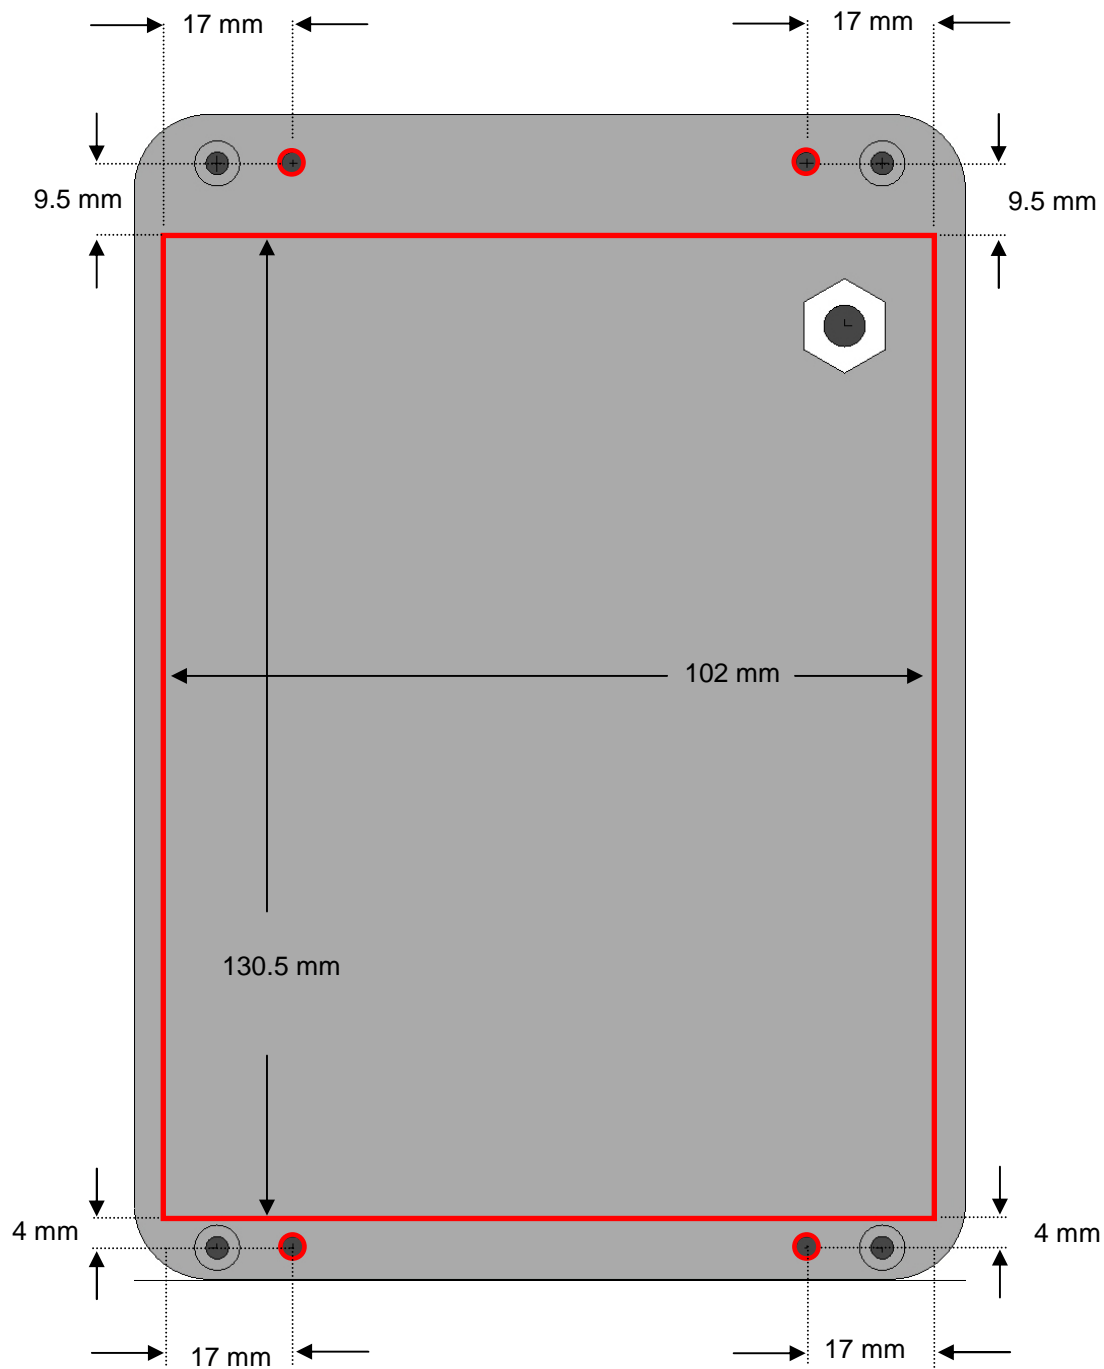

Fixing Points:

The 516 Controller is mounted using the supplied M3 machine screws.

Please use the red-marked areas on the template above as a guide to aid installation on to the helm or console, using suitable cutting tools and a 3.5mm drill bit for the mounting holes.

Power and Data Connections

The fitted power and data cable is provided with bare ends to aid in installation, so please ensure that care is taken in identifying the relevant connections and polarity.

Data communications to cameras and other devices is achieved via a two wire RS485 connection, and the data connection pins on the controlled devices will be labelled appropriately with a “+” (positive) and a “-“ (negative) indicator. Combinations of multiple control devices and multiple cameras may be connected together using an Iris Data Expander.

Power your unit from a dedicated fuse / breaker rated at 12VDC / 500mA. The unit operates when power to the breaker / fuse is applied. Ensure suitably rated cable is used to handle the required current and voltage.


Connections from the cable:

Colour	Function
Red	12v DC power
Black	0V DC / Ground
Green	RS485 Data +
White	RS485 Data -

Operation:

Main Menu:-

 Immediately from power up the unit displays the Main Menu shown below:

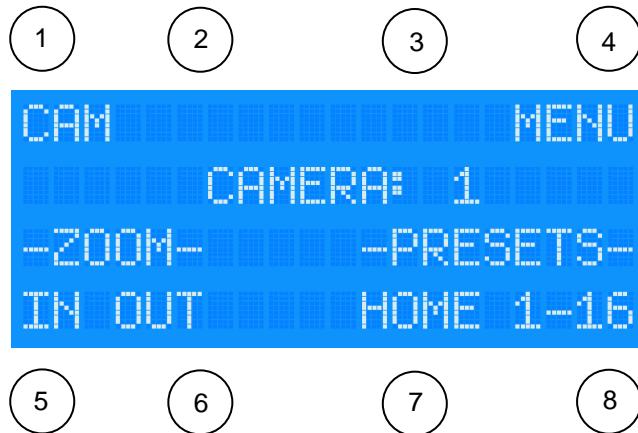

The currently selected camera is displayed in the centre of the LCD.

The eight tactile illuminated push buttons surrounding the display will action the function displayed adjacent to each button

For example, on the main menu, button five (in the lower left corner of the unit) will perform a zoom in function of the selected camera if available.

The push buttons are used to perform specific camera functions, and to navigate through the menu structure.

From the Main Menu, movement of the joystick control will also pan and tilt any PTZ camera connected and selected.



You can return to this Main Menu from any other menu, by pressing up on the joystick control, unless specifically other-wise stated.

Please note that accessible features displayed on the menus will be dependant on the features available of the currently selected camera, as not all cameras support the same feature set (ie colour cameras will not be able to use thermal imaging capability).

On this Main Menu, the buttons and their relevant functions are:

Button	Function
1	Navigate to Camera Select Menu
2	N/A
3	N/A
4	Navigate to the Function Menu
5	Zoom In
6	Zoom Out
7	Sent PTZ camera to Home position
8	Navigate to Preset Select Menu

 Camera Select Menu:-

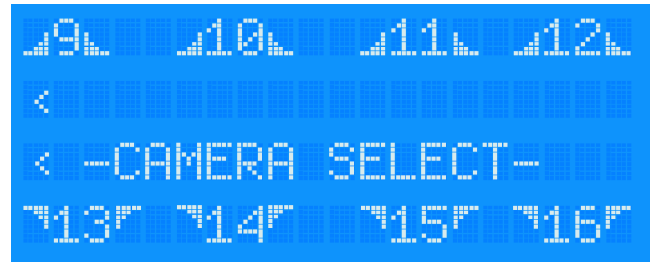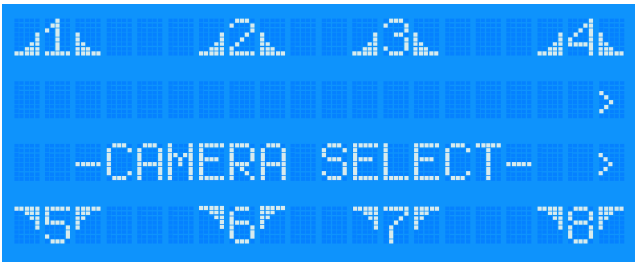

Button	Function
1-8	Select Camera to control

Camera Select:

This feature is used to change the currently controlled camera. The camera number refers to the Pelco-D based address setting of the camera. Please see individual camera installation documentation for instructions on how to set this.

Moving the joystick left and right will toggle between selecting cameras 1-8 and 9-16.

Preset Select Menu:-



Button	Function
1-8	Select Preset to send camera to

Preset Select:

This feature is used to send the currently selected camera to the save preset positions.

Moving the joystick left and right will toggle between selecting presets 1-8 and 9-16.

Function Select Menu:-




Button	Function
1	Navigate to Lens Function Menu
2	Navigate to Day/Night Function Menu
3	N/A
4	Toggles Image Pause
5	Navigate to Scan Modes Menu
6	Navigate to Thermal Scene Modes Menu
7	Navigate to Thermal Colour Palettes Menu
8	Navigate to Settings Menu

Pause:

This feature will pause/freeze the image from the camera for further inspection, and a second press will return the camera to a live video signal.

Lens Function Select Menu:-

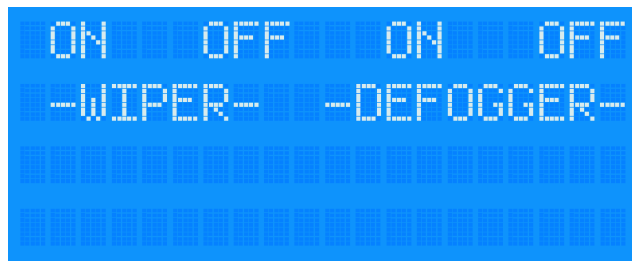

Button	Function
1	Wiper On Function
2	Wiper Off Function
3	Defogger On Function
4	Defogger Off Function
5	N/A
6	N/A
7	N/A
8	N/A

Wiper:

This feature enables/disables a camera lens wiper, if fitted, in order to clear the display of any moisture. Ensure that any wiper is not enabled and continues to run whilst the camera window is dry.

Defogger:

This feature enables a defogging unit which will heat the camera lens window for a short period of time and remove any condensation that has formed out the outside as a result of temperature and weather conditions. If the camera does not have an automatic time-out, please ensure the defogger is disabled once the screen is clear.

Day / Night Functions Menu:-

```
TOGGLE          AUTO
-DAY/NIGHT-
-LAMPS-
OFF HI LO ON
```

```
DAY NIGHT AUTO
-DAY/NIGHT-
-LAMPS-
OFF HI LO ON
```

Button	Function
1	Toggle Day/Night Mode / Set Day Mode
2	Set Night Mode
3	N/A
4	Set Day/Night Auto Mode
5	All Lamps Off
6	High (Spot) Beams on only
7	Low (Flood) lamps on only
8	All Lamps On

Day/Night:


This feature either sets the camera into Day mode (full colour) or Night mode (monochrome with enhanced image clarity), or toggle between the two, dependant on the camera model. The Auto option will set the camera to automatically detect the optimum setting based on the current surrounding light levels. Ie. will automatically switch to Night mode when dark, and back to Day mode when sufficient light is available to produce a clear image again.

Lamps:

This enables either White-light flood lamps, or Infra-red beams if available on the currently selected camera.

If fitted, available options will be to activate either high or low beams, for spot lighting and flood lighting respectively, or to enable both simultaneously for maximum all-round night vision, or to de-activate all lamps.

Scan Functions Menu:-

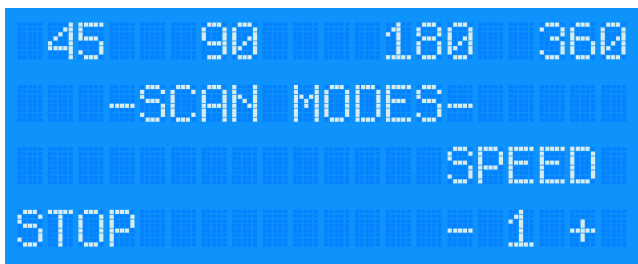

Button	Function
1	Start 45° Scan / Start 360° Random Scan
2	Start 90° Scan
3	Start 180° Scan
4	Start 360° Continuous Scan
5	Stop Scan
6	N/A
7	Reduce Scan speed
8	Increase Scan speed / Start Auto-Cruise

Scans:

The 45/90/180/360 degree scans will initiate the camera to begin automatically moving back and forth in a sweeping motion to covering the respective angle around its current position.

Speeds:

If the current camera supports variable speed scans, using the +/- Speed Set button, then selecting the required scan will start the scan mode of at either speed 1 (slow), 2 (medium) or 3 (high speed).

Cruise:


Auto Cruise facility enables a camera to continuously go to each of it's previously configured preset positions in turn.

Stop:

The stop scan button if available will stop the current scan running and return to normal operation. If this feature is not available, the camera will be returned to standard control by panning or tilting the camera with the control joystick.

Thermal Functions:-

Thermal Colour Palette Selection:

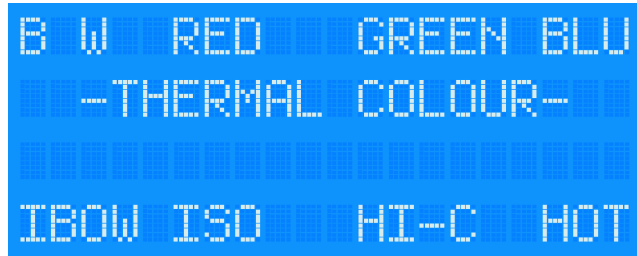


Button	Function
1	Set Black and White / Monochrome colour palette
2	Set Red-Black colour palette
3	Set Green-Black colour palette
4	Set Blue-Black colour palette
5	Set Iron-Bow colour palette
6	Set Iso-Therm colour palette
7	Set High Contrast colour palette
8	Set "Hot-Metal" colour palette

Palettes:

These functions will set the displayed colour palette of a thermal imaging camera (ie. Iris 216/316). If the same button is pressed a second time, the colour palette will invert. Eg. Pressing Red will display higher temperature regions in Red and lower temperatures in black, and a subsequent press will display higher temperatures in black and lower temperatures in Red.

Thermal Scene Modes Selection:

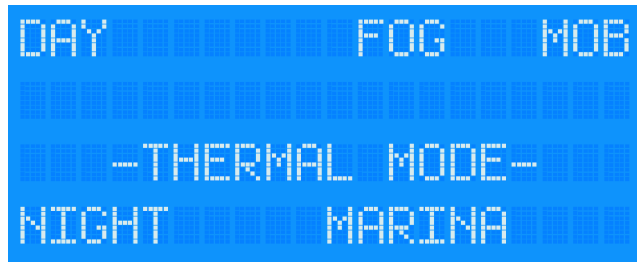

Button	Function
1	Set Day Mode
2	N/A
3	Set Fog Mode
4	Set Man-Over-Board Mode
5	Set Night Mode
6	N/A
7	Set Marina Mode
8	N/A

 
Thermal Modes:

These functions will set an attached and selected Thermal imaging camera to operate in a specific mode. The modes available are exclusive to the IRIS216 and IRIS316 Thermal PTZ cameras, and are optimised to produce the best image possible in a multitude of atmospheric conditions.

Please refer to the camera documentation for more details.

Settings:-

Main Settings Menu:

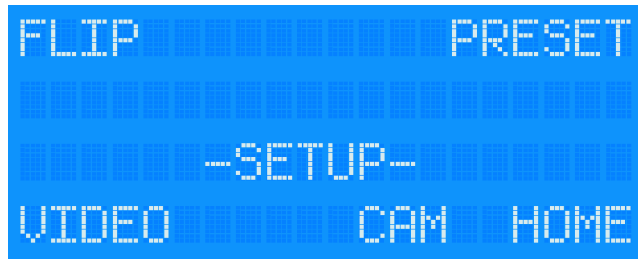

Button	Function
1	Navigate to Image Flip Menu / Flip Image
2	N/A
3	N/A
4	Navigate to Set Presets Menu
5	Navigate to Set Video Format Menu
6	N/A
7	Navigate to Set Camera Type Menu
8	Set Home Position


Image Flip:

The Image Flip function will either flip the image Vertically to allow inverted mounting of each camera, or present the user with an additional menu if the camera supports advanced image flip modes.

Home:

This will set the cameras current pan and tilt position as it's new "Home" position. The home position of a PTZ camera, is the position to which it will move when first powered up. Please see relevant camera specific documentation for more details.

Image Flip Menu:

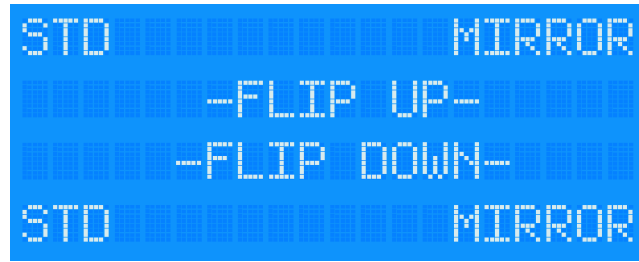

Button	Function
1	Flip Image Up / Standard
2	N/A
3	N/A
4	Flip Image Up / Mirrored
5	Flip Image Down / Standard
6	N/A
7	N/A
8	Flip Image Down / Mirrored

Image Flip:

If advanced image flip modes are available for the selected camera, the camera image can be flipped in any combination of Up/Down/Standard and Mirrored.

Up/.Down:

Flip Up refers to when the PTZ camera is mounted with its base at its lowest point, i.e. deck mounted.

Similarly Flip Down refers to when the camera is mounted in a hanging position from a ceiling or mast.

This will invert the image vertically to reflect its current mounting position.

 
Standard/Mirrored:

Flip Standard indicates that the camera is to display a standard image to reflect the actual viewing area accurately.

Flip Mirrored will provide a Horizontally inverted image.

Eg. This is ideal for cameras mounted aft in order to aid reference. If the image is flipped Mirrored, then whilst looking fore, items on the users right of the camera, will in fact be shown on the right hand side of the display area, but would otherwise show on the left.

Preset Save Menu:

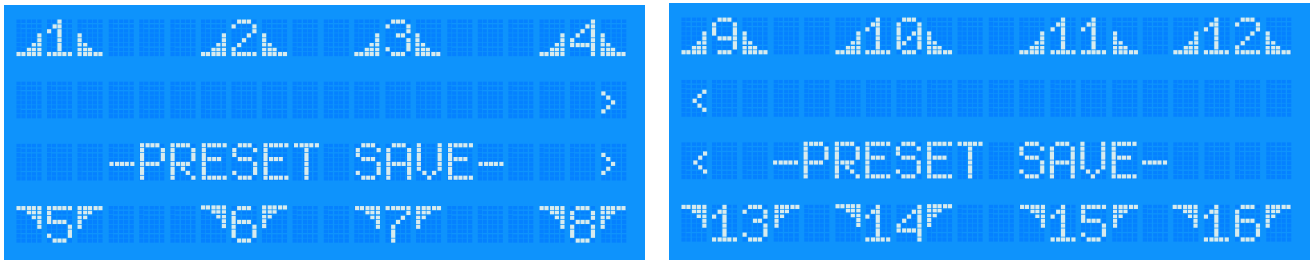


Button	Function
1-8	Select Preset position to store

Preset Save:

This feature is used to save the currently camera position to the selected preset number for future use. From the Main Menu, navigate to the desired position using the joystick control and zoom buttons first, and then via this menu that position can be saved for future recall from the Preset Select Menu.

Moving the joystick left and right will toggle between the options for saving preset positions 1-8 and 9-16.

Set Video Standard Menu:

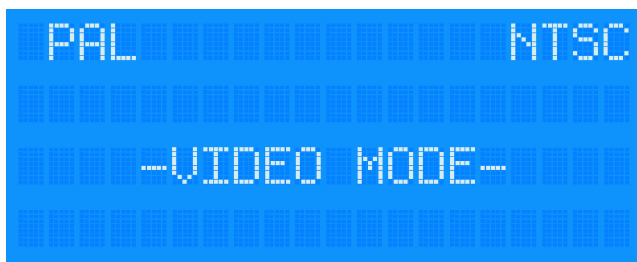

Button	Function
1	Set PAL video standard
4	Set NTSC video standard

Video Standard:

This menu allows the Video output standard to be changed from PAL to NTSC to match that of the video display equipment. Some cameras will need to be power-cycled for the change to take effect.

Set Camera Type Menu:



Button	Function
1	Set as IRIS116 PTZ camera
2	Set as IRIS117 or IRIS118 PTZ camera
3	N/A
4	Set as IRIS216 or IRIS316 Thermal PTZ camera
5	Set as IRIS106 PTZ dome camera
6	N/A
7	N/A
8	Set as IRIS130 PTZ camera

Camera type / model:

This menu allows configuration of the IRIS516 controller for each connected camera.

In order to enable the correct functionality for all connected cameras, first a camera must be selected from the Camera Selection Menu, and then via this Set Camera Type Menu, the correct model must be set for the relevant camera. This must be performed for each camera connected on the system in order for the camera specific advanced features to be accessible.

Notes:

Notes:



Iris Innovations Limited Units 8
& 9 Swanwick Business Centre Bridge
Road
Swanwick
Hampshire SO31 7GB
United Kingdom
Tel: +44(0)1489 570797 email:
info@boat-cameras.com
www.boat-cameras.com